


**CAUTION :** Read instructions thoroughly and completely prior to beginning installation.

## Installation Instructions


# (K)(M)400DR-B

## Dead-end Receptacle - Interface type C

**Bolted type**  
**400 A - Up to 36 kV**

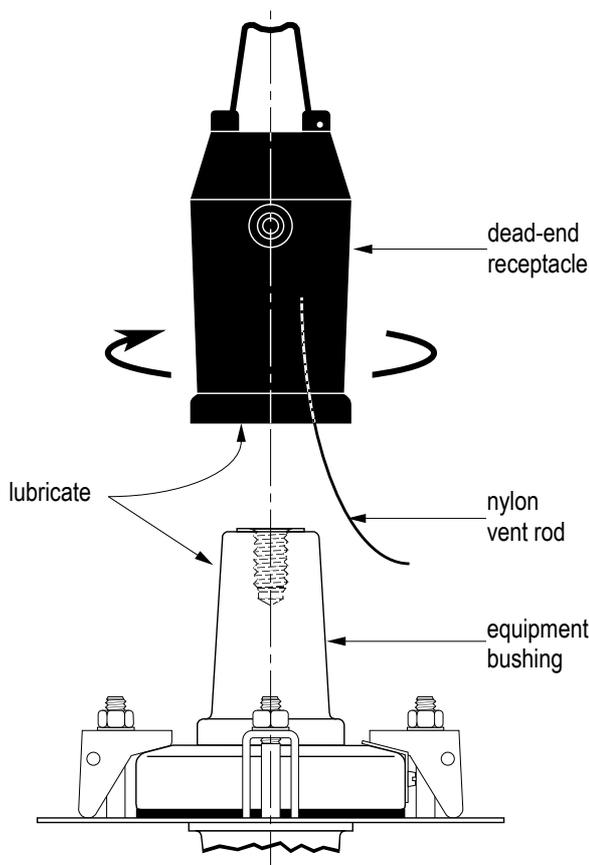

1. Clean and lubricate bushing interface and inside of the receptacle.  
**USE ONLY THE SILICONE GREASE SUPPLIED WITH THE KIT.**
2. Insert nylon vent rod into the receptacle to exhaust the air during the assembly.

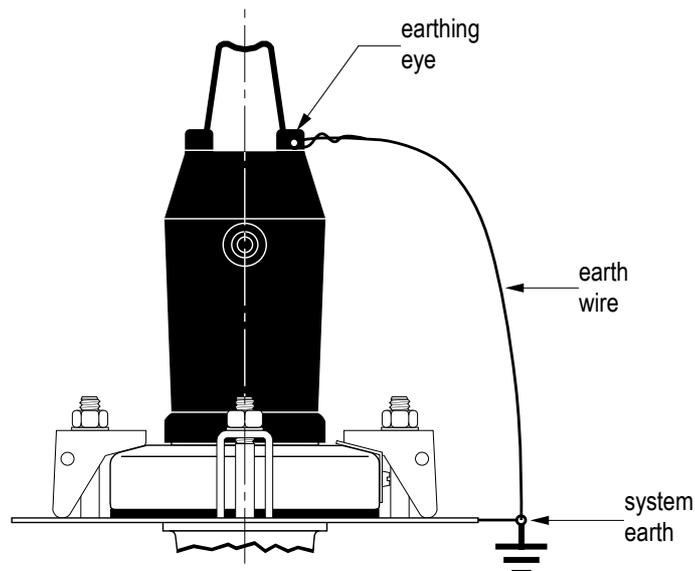

3. Push the receptacle onto the bushing interface as far as it will go.  
Twist clockwise until the threads between the bushing and the receptacle engage; continue turning without pushing until resistance is felt.  
**DO NOT OVERTIGHTEN. REMOVE NYLON VENT ROD.**
4. Connect one end of the tinned earth wire to the earthing eye of the receptacle and other end to the system earth.

**NOTE :** This product should be installed by competent personnel familiar with electrical equipment and safe operating practices. Parts contained in this kit should be visually inspected for possible damage, and installed in accordance with the following instructions. These instructions are not intended as a substitute for adequate training and experience in good safety practices.

**IMPORTANT :** Cable and associated apparatus must be de-energised, locked out, and tagged prior to product installation.

90075E-R/2-A

**Euromold**  
a Nexans company

**EUROMOLD N.V.**

Zuid III - Industrielaan 12

B-9320 EREMBODEGEM-AALST – BELGIUM

Tel: +32 (0)53/85 02 11 – Telefax: +32 (0)53/83 10 13